

Batec Solvarme

BATEC Solvarme A/S, Danmarksvej 8, 4681 Herfølge Tlf. 56275050 Fax 56276787

Datablad for føler til BDT-SOL

Temperatur °C	Modstand Ω
-55	490
-50	515
-40	567
-30	624
-20	684
-10	747
0	815
10	886
20	961
30	1.040
40	1.122
50	1.209
60	1.299
70	1.392
80	1.490
90	1.591
100	1.696
110	1.805
120	1.915
130	2.023
140	2.124
150	2.211

